


# Owner's Guide

Please Save for Future Reference

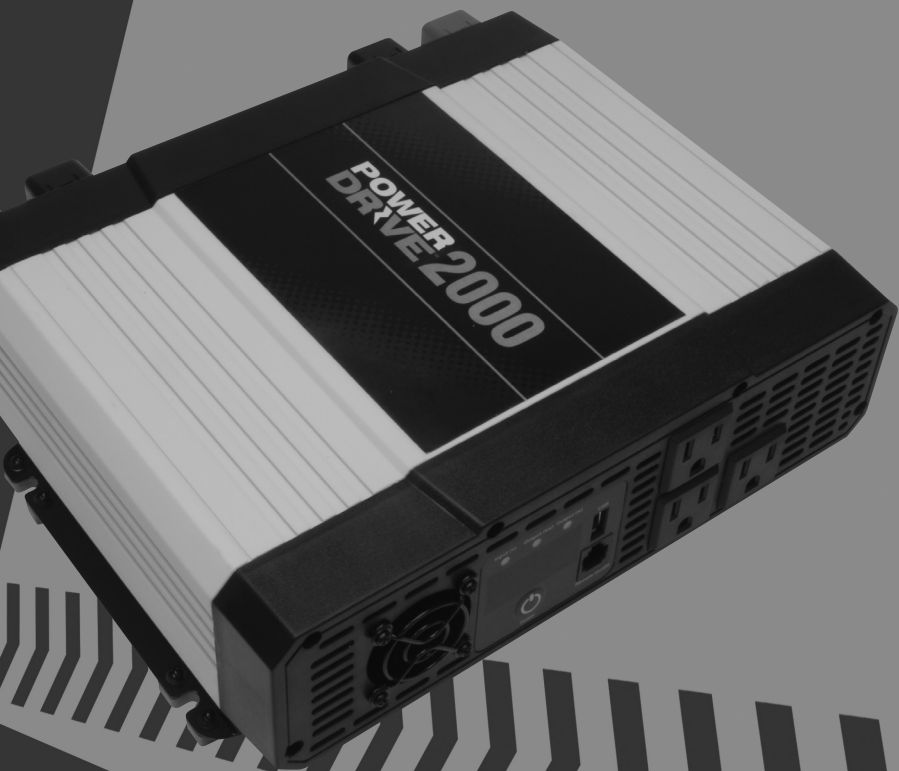

**POWER  
DRIVE 2000** 2000 Watt  
DC to AC  
Power Inverter

Thank you for purchasing the POWERDRIVE2000 power inverter, a high performance solution to using household power while on the road. Please read and understand all of the information provided in this manual before operating or installing. If properly used, the inverter will give you years of reliable service providing AC power for TVs, computers, appliances, stereos and power tools. For safe and optimum performance, the inverter must be installed and used properly. Carefully read and follow the guidelines in this manual giving special attention to the CAUTION and WARNING statements. Keep this manual for reference should troubleshooting be necessary.

**CAUTION** statements provide information that could damage your inverter or equipment connected to it.

**WARNING** statements provide information on conditions that could result in personal injury or loss of life.

**WARNING:** Incorrect installation or misuse of the RPPD2000 could result in personal injury or damage to the inverter and/or attached equipment. Read and follow the directions in the owner's manual. The ROADPRO RPPD2000 produces the same potentially lethal AC power as normal household outlets. It is suggested that you treat it with the same respect that you would any AC outlet.

**WARNING:** SHOCK HAZARD, KEEP AWAY FROM CHILDREN.

DO NOT insert any foreign objects into the RPPD2000's outlets, vents or fan openings.

DO NOT expose the RPPD2000 to rain, water or any other liquids.

DO NOT connect the RPPD2000 to utility power distribution systems or branch circuits.

**WARNING:** HEATED CASE AND SURFACE.

The case to the RPPD2000 may become very warm under high power operation reaching 140°F. Be sure that there is at least 4 inches of unobstructed air space around the entire surface of the inverter at all times. During use, DO NOT place materials that could be damaged by heat on or near the RPPD2000.

**WARNING:** EXPLOSION HAZARD.

DO NOT operate the RPPD2000 near flammable fumes or gases such as the bilge of a gasoline power boat, or near propane tanks.

DO NOT operate the RPPD2000 in an enclosed area that contains automotive type lead-acid batteries. This type of battery emits explosive hydrogen gas which can be ignited by sparks.

## **CAUTION:**

DO NOT connect the RPPD2000 to live AC power circuits. Damage to the inverter will result even if the power switch is in the OFF position.

DO NOT connect any AC device which has its neutral conductor connected to ground.

DO NOT expose the RPPD2000 to air temperatures in excess of 104°F.

DO NOT use the RPPD2000 on the following items:

1. Small battery-operated appliances such as flashlights, razors and nightlights that can be plugged directly into an AC outlet to recharge.
2. Certain battery chargers for battery packs used in hand power tools. These chargers will have a "Warning Label" indicating that dangerous voltages are present at the battery terminals.

## **RPPD2000 Waveform Output:**

The output waveform of your RPPD2000 is referred to as "square wave" or "modified sine wave." Some very sensitive electronic equipment and some medical equipment (listed below) may not operate satisfactorily on "square wave" or "modified sine wave." It is a stepped waveform designed to have characteristics similar to the pure sine wave shape of utility power. A waveform of this nature is suitable for most AC loads (including linear and switching power supplies used in electronic equipment, transformers and motors).

The problems described above, do not occur with most battery-operated equipment. The vast majority of these items use a separate charger or transformer that plugs into the AC outlet and produces a low voltage output. If the label on your adapter states that it produces a low voltage (AC or DC) output (30 volts or less) then the RPPD2000 will operate the item safely. Some of the following items may not operate properly on a "square wave" inverter. If you have any questions, contact the device's manufacturer.

- Laser printers, photocopiers, magneto-optical hard drives.
- Certain laptop computers.
- Some fluorescent lights with electronic ballasts.
- Power tools employing "solid state" power or variable speed control.
- Some battery chargers for cordless tools.
- Digital clocks with radios.
- Medical equipment such as oxygen concentrators, nebulizers, and CPAP machines.

## **INSTALLATION:**

### **Selecting a suitable location**

The RPPD2000 must be installed in an area that meets the following requirements in order to operate safely and provide optimum performance:

1. **DRY:** DO NOT expose the unit to moisture.
2. **COOL:** Ambient air temperature should be between 32°F and 104°F. Cooler areas are best.
3. **VENTILATION:** Allow at least 4 inches of clearance above and around all sides and top of the unit for proper cooling.
4. **SAFE:** DO NOT install the RPPD2000 in a compartment with batteries or flammable liquids or vapors such as gasoline or propane.
5. **CLEAN:** DO NOT install the RPPD2000 in an area that is prone to dirt, dust or debris. This is especially important if used in a work environment.

### **Connecting DC Power Cables:** Red +, Black – (included with inverter)

1. Reversing the polarity of the cables (positive to negative) will result in damage to the RPPD2000 and will void the warranty.
2. For safety, disconnect the RPPD2000 from the battery when not in use.
3. Use grommets to protect cables from bare metal edges when installing through firewalls or bulkheads.
4. Use only the cables supplied with this unit. Using longer cables will require a thicker cable to reduce or minimize voltage drop to inverter.

The power cable is very important to the performance of the inverter. Because the inverter has a low voltage, high current input, low resistance wiring is essential between the battery and inverter. This is so it can deliver the maximum amount of energy to the load. Keep the cable length as short as possible, no more than four feet (one and a half meters). This will keep the voltage drop to a minimum. If the cable has too much voltage drop, the inverter may shut down when drawing higher currents because voltage at the inverter may drop below 10.5 volts. If you must use longer cables (up to 10 feet), choose thicker cables, such as # 0 AWG, and trim the ends of the cable to fit the terminals.

## **Connect the Power Cables to the Inverter:**

Connect cable to the Power Input Terminals on input end of the inverter. The red terminal is positive (+) and the black terminal is negative (-). Unscrew the terminal on the inverter and install the appropriate color (black to black and red to red) ring-terminal of the cables and tighten the screws to clamp the wires securely.

**NOTE:** It is a good idea to check and tighten these screws from time to time. They can become loose by vibrations or thermal cycling. Loose connectors result in excessive voltage drop and may cause overheated wires and melted insulation.

## **Connect the Power Cables to the Battery:**

1. All four cables must be connected.
2. Connect the cable from the Negative Terminal (Black) of inverter to the Negative Terminal of the battery.
3. Connect the cable from the Positive Terminal (Red) of the inverter to the Positive Terminal of the battery. You might observe a spark when you make this connection since current can flow to charge capacitors in the inverter.

**CAUTION:** Reversing the polarity of these cables (positive to negative) will result in damage to the RPPD2000 and will void the warranty.

4. The inverter is now ready to deliver AC power to your loads. Press the Power Button to on. If several loads are to be operated by the inverter, turn them on separately, after the inverter has been turned on. This will ensure that the inverter does not have to deliver the starting currents required for all the loads at once.


## **CAUTION:**

Connect the RPPD2000 to batteries with a normal output of 12-volts DC only. 6-volt batteries do not supply enough voltage, and a 24-volt battery supplies too much voltage and will damage the RPPD2000. Never work on the AC wiring without first physically disconnecting the DC connections.

## CAUTION:

Never disconnect the DC cables from the inverter without first disconnecting the cables from the battery or potentially lethal electricity will be left exposed.

**NOTE:** The Power Button turns the control circuit in the inverter on and off. It does not disconnect power from the inverter. When the button is in the off position, the inverter draws no current from the battery. When it's in the on position, but no power is being supplied to a load, the inverter draws less than ½ amp from the battery. This is low current draw. It would take more than a week to discharge a 100 ampere hour battery at this rate depending on the age of the battery. For safety disconnect the RPPD2000 from the battery when not in use.

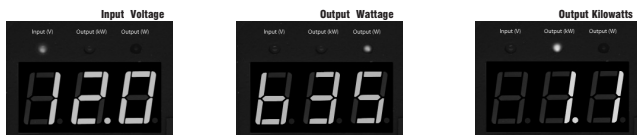

## Operating Indicators:

Indicators on the output end of the unit show the inverters power status and alarms for conditions that could cause it to shut down. When the inverter power is on, the voltage input and power output indicators, automatically toggle between input and output values at three-second intervals. The three LEDs indicate the mode the meter is in and the three digits indicate the voltage or power value.

**NOTE:** Once the inverter power output value has exceeded 999 watts, the display will indicate kilowatts. Example: 1.25 kilowatts = 1250 watts.

## Current Overload Protection:

If the inverter is overloaded, it will shut down to protect itself. The meter will flash (OLP) to indicate Overload Protect. To restore normal operation, disconnect the excessive load and turn the unit off and on again using the Power Button.

## Short Circuit Protection:

If the AC output of the inverter is short circuited for one second or more, it will shut down to protect itself. The meter will flash (OPP) to indicate Short Circuit Protect and an alarm will sound. To restore normal operation, disconnect the short circuit and turn the unit Off and On again using the Power Button.

### **Low Voltage Protection:**

If the DC input voltage drops below the alarm threshold of 10.5V the meter will flash (LUP) to indicate Low Voltage Protection, but the unit will continue to operate. If the input voltage drops to 10.0V or less, the inverter will shut down to protect itself, the meter will continue to flash (LUP), and an alarm will sound. To restore normal operation, return the DC input voltage to at least 12V. The inverter will automatically return to normal operation.

### **High Voltage Protection:**

If the DC input voltage rises above 15.0V, the inverter will shut down to protect itself, the meter will flash (OUP) to indicate Over Voltage Protection, and an alarm will sound. To restore normal operation, return the DC input voltage to less than 15V. The inverter will automatically return to normal operation.

**CAUTION:** Although the inverter has protection against over-voltage, it may still be damaged if the input voltage were to exceed 16 volts.

### **Over Temperature Protection:**

If the internal inverter temperature rises above the alarm threshold, the meter will flash (OCP) an alarm will sound to indicate over temperature protection, and the unit will continue to operate. If the internal temperature rises to 104°F, the inverter will shut down to protect itself, the meter will continue to flash, and the alarm will continue to sound.

**NOTE:** Internal inverter temperature can rise due to being operated in a high heat environment or due to the fan or vents being blocked during operation (even in relatively cool outside air). To restore normal operation, turn the unit off and allow it to cool. The inverter will automatically return to normal operation after it has cooled.

### **Remote On/Off Switch:**

An optional Remote On/Off Switch can be connected to the Remote Jack allowing you to turn the power inverter on or off from a convenient location when the inverter is installed in an out of reach location.

**USB Outlet:** The USB outlet will supply 5 volts at 500ma to charge and power cell phones, iPods® and other small electronics.

### **Operating Limits**

#### **Power Output:**

The inverter can deliver 2000 watts for about 60 minutes. The inverter must cool for 15 minutes before it can resume operation at 2000 watts.

**NOTE:** The wattage rating applies to resistive loads. The inverter will operate most AC loads within its power rating. Some induction motors used in freezers, pumps, and other motor-operated equipment require very high surge currents to start. The inverter may not be able to start some of these motors even though their rated current draw is within the inverter's limits. Operating time will vary depending upon the type, capacity charge level of the battery, and the power draw of the AC products you are using. With a normal vehicle battery and a 100 watt load (such as a small television) you can expect an operating time of 2 to 3 hours. It is recommended that you start your vehicle once an hour when using the RPPD2000 for extended periods of time to prevent draining the battery.

**WARNING:** To prevent personal injury or loss of life, never start or leave your engine running in a poorly ventilated area such as a garage.

### **Helpful Formulas:**

To Convert AMPS to WATTS:  $\text{AMPS} \times \text{VOLTS} = \text{WATTS}$

To Convert WATTS to AMPS:  $\text{WATTS} \div \text{VOLTS} = \text{AMPS}$

These formulas yield a close approximation of the continuous loads of a product.

#### **To calculate approximate Startup Load:**

Multiply:  $\text{WATTS} \times 2 = \text{Starting Load}$

This formula yields a close approximation of the starting load of the appliance, although some may require an even greater starting load. **NOTE:** Induction motors such as air conditioners, refrigerators, freezers and pumps may have a start up surge of 3 to 7 times the continuous rating. Most often the start up load of the appliance or power tool determines whether an inverter has the capability to power it.

For example: You have a freezer with a continuous load of 4 amps, and a start up load of 12 amps:

4 amps x 120 volts = 480 watts continuous, 12 amps x 120 volts = 1440 watts starting load

You would need an inverter with peak-surge rating greater than 1440 watts to run this appliance.

#### **FORMULA to convert AC Watts to DC Amps:**

AC Watts divided by 12 x 1.1 = DC Amps

This is the size vehicle alternator you would need to keep up with a specific load; for example, to keep up with a continuous draw of 1000 watts, you would need a 91 amp alternator.



**To calculate the total watt-hours of energy consumption:**

Multiply the power by the operating time. To determine how many 12-volt amp hours will be consumed, divide the watt hours by 10.

Example: 150 Watts x 1 Hour = 150 Watt Hours

150 Watt Hours ÷ 10 = 15 12 Volt Amp Hours

**Estimated Watts Used by Common Appliances and Tools**

| Appliance               | Approx. Watts | Appliance        | Approx. Watts |
|-------------------------|---------------|------------------|---------------|
| Blender                 | 300           | 12" 3 speed fan  | 230           |
| Coffee pot              | 1500          | VCR              | 40-60         |
| Blow dryer              | 900-1500      | CD or DVD player | 35            |
| Hot plate               | 1200          | SONY PS3         | 360           |
| Refrigerator (Running)  | 600           | Xbox Console     | 100           |
| Refrigerator (Start up) | 1800 » 3600   | LCD television   | 50 » 150      |
| 700 watt Microwave*     | 1100          | Laptop computer  | 150           |

\*NOTE: The power rating given with microwave ovens is the “cooking power” which refers to the power being “delivered” to the food being cooked. The actual operating power requirement rating is higher than the cooking power rating (for example, a microwave with “advertised” rating of 700 watts usually corresponds to almost 1100 watts of power consumption). The actual power consumption is usually stated on the back of the microwave. If the operating power requirement cannot be found on the back of the microwave, check the owner's manual or contact the appliance manufacturer.

**Specifications:**

|                                     |                             |
|-------------------------------------|-----------------------------|
| Operating AC Voltage (Normal)       | 105~125-Volts AC            |
| DC Input Voltage                    | 10~15-Volts DC              |
| Continuous AC Power Output          | 2000 Watts                  |
| USB Output                          | 5 Volts DC                  |
| Maximum AC Power Output (Surge)     | 4000 Watts                  |
| AC Output Frequency                 | 60Hz ±2Hz                   |
| AC Output Waveform                  | Modified Sine Wave          |
| Battery Drain with No AC Load       | 0.50 Amps                   |
| Efficiency (Maximum)                | 87%                         |
| Ambient Operating Temperature Range | 14°F (-10°C) ~ 104°F (40°C) |
| Low Battery Alarm Trigger           | 11 ±0.3-Volts DC            |
| Low Battery Shut Down Point         | 10.5 ±0.3-Volts DC          |
| High Voltage Shut Down Point        | 15.5 ±0.5-Volts DC          |

*Specifications Subject to Change without Notice*

**Problem/SymptomPossible Causes****Solution**

Low output voltage

Overloaded

Reduce the load.

No output voltage  
Red LED illuminated  
Alarm sounding

Low input  
Voltage

Recharge battery.  
Check connections and cable.  
Continuous operation input  
current required.

Thermal shutdown

Overloaded

Allow inverter to cool off.  
Reduce load. Improve ventilation; make sure  
ventilation openings in the inverter are not obstructed.  
Reduce ambient temperature.

No output voltage  
Red LED illuminated  
Alarm sounding

High input  
voltage

Make sure the inverter is  
connected to a 12V battery.  
Check regulation of charging systems

No output voltage  
Red LED illuminated  
No alarm

Short circuit

Check load for  
proper operation.  
Inspect cables from battery.

No output voltage

Inverter switched off  
No power to inverter  
Reverse DC polarity

Turn inverter on  
Check wiring to inverter.  
Observe correct polarity  
(black to black/red to red).  
Inspect cables from battery.

Low battery alarm  
on all the time

Poor DC wiring  
Poor battery condition

Check connections.  
Make sure battery is fully charged.

This Limited One Year Warranty from POWERDRIVE, a DAS brand, applies to all electronic products and devices manufactured by DAS Distributors and sold under the brand name POWERDRIVE.

### **Terms of the Warranty:**

POWERDRIVE warrants that the product you have purchased from a DAS authorized retailer is free from defects in materials and workmanship under normal use during the warranty period. The warranty period begins on the day of retail sale. This warranty extends only to the original purchaser. It is not transferable to anyone who subsequently receives the product. It excludes all expendable parts (fuses, etc). During the warranty period POWERDRIVE will repair your defective product, replace it with an identical item, or at our option exchange it for an equivalent product of value and performance. This Limited Warranty does not extend to any product that has been damaged or rendered defective as a result of: an accident, misuse or abuse, as a result of an act of God, by operation outside the usage parameters stated in this manual, by modification of the product, attempted repair, or as a result of war or terrorist attack. Other limitations of this warranty exclude; payment for your lost time, loss of use of your product, or property damage caused by the product or its failure to work, or any other incidental or consequential damages including personal injury. Except as expressly set forth in this warranty statement, POWERDRIVE makes no other warranties expressed or implied. Defective products must be returned to the dealer within 30 days, after 30 days, the product may be returned to POWERDRIVE.

When returning products to POWERDRIVE: Shipping to POWERDRIVE shall be prepaid, your replacement will be mailed back to you at no additional charge. Carefully pack product and all included accessories into a suitable box, along with original dated register receipt or invoice, a letter stating the defect, daytime phone number, and a physical return address. (UPS will not deliver to a PO Box.)

- Any package with a PO Box address will not be processed, and will be held until further notification from you.
- Make sure you can track your shipment to us. POWERDRIVE will not be responsible for lost packages.
- POWERDRIVE will not be responsible for damage incurred during shipment to us.
- Failure to provide a dated proof of purchase will invalidate warranty.

Ship to:

### **POWERDRIVE Returns**

**1875 Zeager Road, Elizabethtown, PA 17022**

For customer assistance and technical support call 1-866-622-7979 Monday through Friday 8:00am to 5:00pm Eastern Time. Or write to: [techsupport@roadprobrands.com](mailto:techsupport@roadprobrands.com)



**POWERDRIVE™ POWER  
INVERTERS**

1875 Zeager Road, Elizabethtown, PA 17022

© POWERDRIVE